

# INSTALLATION INSTRUCTION

---



## DICKEY-JOHN GAC 2500-UGMA PRODUCT CALIBRATION DOWNLOAD

GIPSA'S Federal Grain Inspection Service (FGIS) offers product calibration files for loading to the DICKEY-john GAC 2500-UGMA Grain Moisture Analyzer.

**NOTE:** For technical assistance, please contact DICKEY-john technical support at 1-800-637-3302.

**NOTE:** Before downloading calibrations verify the USB memory device is formatted as FAT and NOT FAT32. See "Formatting USB Memory Device" section for formatting instructions.

**NOTE:** Root directory (such as F:) is the first directory that shows when opening a drive. If having issues locating the root directory, go to "Start/My Computer" and open the USB memory device. Proceed to step 9.

**NOTE:** Refer to the back of this instruction for how to format a USB memory device.

### DOWNLOAD CALIBRATIONS FROM FGIS WEBSITE

If a USB memory device with preloaded calibration files is already in your possession, proceed to the "Load Calibrations to GAC 2500-UGMA" section.

#### To download calibrations to a USB memory device:

1. Visit the FGIS Equipment website at <http://www.gipsa.usda.gov/fgis/equipment.html>.
2. Insert USB memory device into computer's USB drive.
  - Remove all existing files from USB memory device.
3. Scroll down to the "Official Moisture Calibrations" section and right click on "Download all official moisture calibration files for DICKEY-john GAC 2500-UGMA".
  - Product calibration files are saved in a zip format and require extraction before loading to the GAC 2500 instrument.

#### **IMPORTANT: All official calibrations must be downloaded to the USB memory device.**

4. Select "Save Link As" and save the zip folder to the root directory of the USB memory device.
  - Some computers may display "Save Target As".
5. In Windows Explorer, double click on the directory named: "Month Year Release\_GAC2500\_UGMA\_NTEP\_withUpdater.zip" ex: May 2014 Release\_GAC2500\_UGMA\_NTEP\_withUpdater.zip".
6. Select all files in the directory (Edit/Select All).
7. Copy all files (right click/copy).
8. Paste in the root directory of the USB memory device (right click/paste).
9. Wait for files to finish copying and remove USB memory device.


### LOAD CALIBRATIONS TO GAC 2500-UGMA

1. Power OFF the GAC 2500-UGMA.
2. Insert the USB memory device into the GAC 2500-UGMA USB port located on the front panel.
3. Power on instrument.
4. Files automatically begin loading to the instrument. The program will back up all existing calibration files and install the new ones.
5. Press the **Close** button to exit.
6. When update is complete, press 'No' to avoid running the program again.

# INSTALLATION INSTRUCTION



**Figure 1**  
**Product Updater**

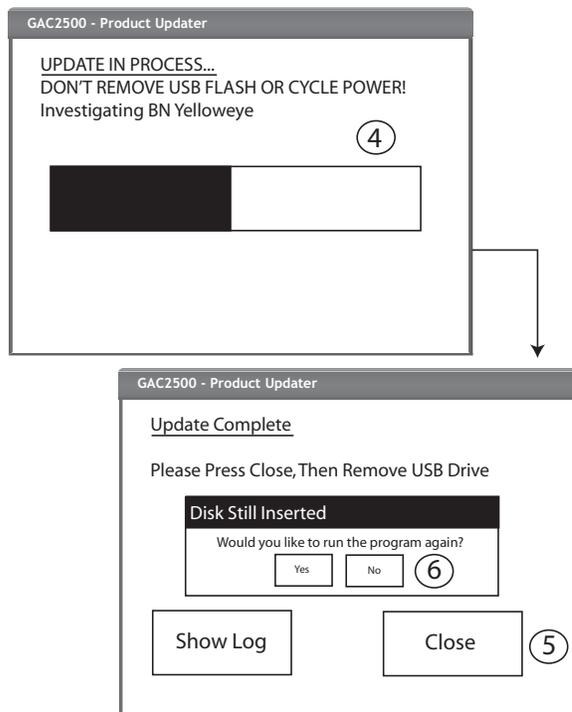

7. Remove the flash drive and the instrument continues to powerup.
8. Once the machine is powered on, custom calibrations that were not included in the updater package can be restored by navigating to the backup directory on the flash drive named <machine serial number>\_OldCals\_<date(yyyyMMdd)>\_<time(HH:mm)>. These calibrations are reloaded from the Setup menu.

## RELOADING CUSTOM CALIBRATIONS TO GAC 2500-UGMA

**NOTE:** The USB memory device must be inserted into the instrument to display the Load New Product button.


1. Insert USB memory device into the GAC 2500-UGMA USB port located on the front panel.
2. At the Main Menu screen, press the **Setup** button.
3. Enter the Name and Password, if required, or press **Enter** to proceed.
4. At the Setup screen, press the **Product** button.
5. At the Product Setup screen, press the **Load New Product** button. **Do not use the Load New Products button to reload custom calibrations.**
6. To load a single product, press the directory contents file to highlight.
7. Press the **Enter** button to open the directory.
8. In the Directory Contents window, press the custom calibration to highlight and **press** the Enter button.

# INSTALLATION INSTRUCTION



Figure 2

## Re-Load Custom Calibrations

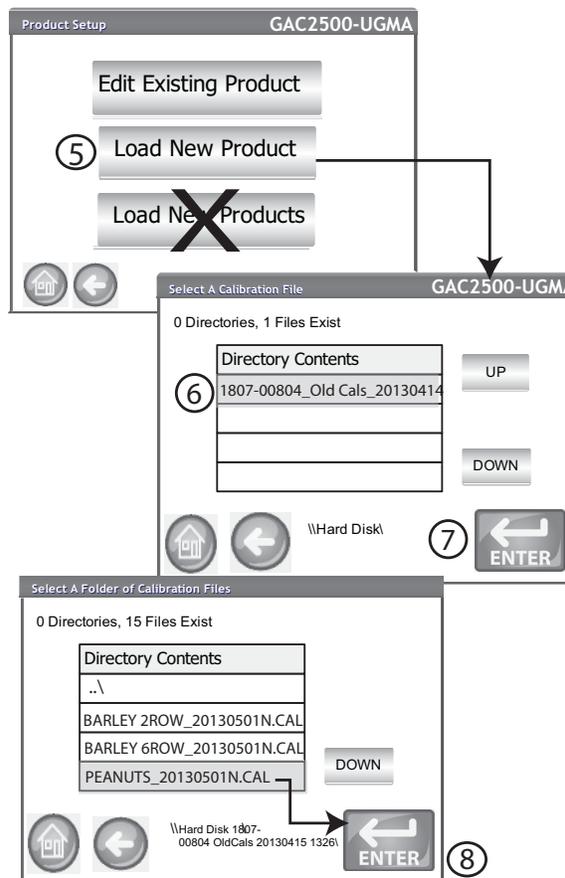

Directory structure to find custom calibrations:  
<machine serial number>\_OldCals\_<date(yyyyMMdd)>\_<time>(HHmm)>

## EXPORT LOG FILE/AUDIT TRAIL (OFFICIAL USERS ONLY)

After calibrations are loaded to the instrument, the log file/audit trail data must be saved to the USB memory device and retained at the central agency office to document that calibrations were installed successfully.

**IMPORTANT: This final step is required for verification that calibrations loaded successfully.**


1. Insert USB memory device into the USB port.
2. At the Main Menu screen, press the **Results** button.
3. At the Results menu, press the **Audit Trail** button.

# INSTALLATION INSTRUCTION




Figure 3

## Save Audit Trail History

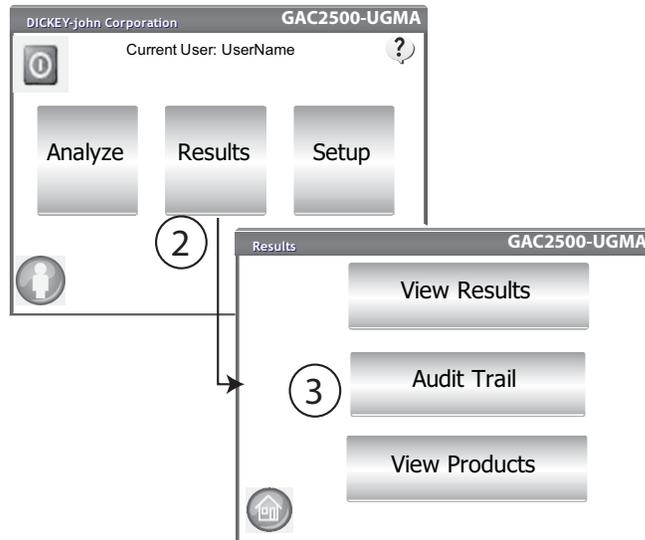

4. At the Audit Trail screen, press the **Filter** button to verify that the **“Show Calibration Changes”** check box is selected.
5. Press the **Enter** button to accept.
6. Press the **USB** button to transfer Audit Trail results.
7. Audit Trail screen will indicate 64 PRODUCT ADD entries preceded by a PRODUCT DELETE for each product previously installed on the instrument before the update.
8. Remove the USB memory device from the instrument and retain at the central agency office to document successful completion. Audit trails for multiple units and other models can be saved on the same USB memory device.

Figure 4

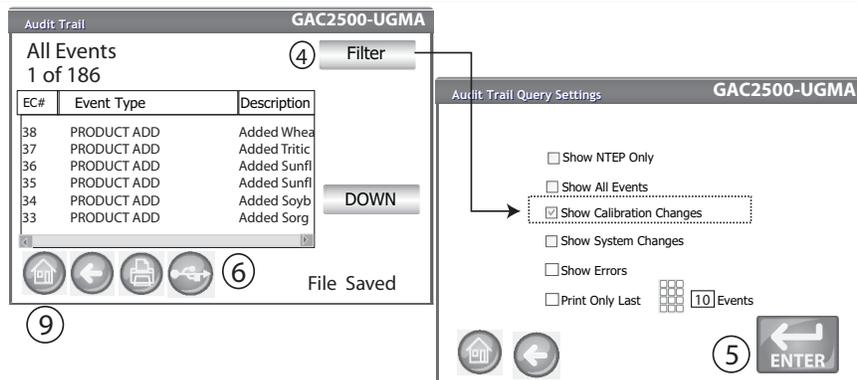


9. Press the **Home** button.
10. At the Home menu screen, press the **Instrument Information** button and verify the directive number reads: 9180-61 05-01-14.

# INSTALLATION INSTRUCTION



**Figure 5**

**Verify Directive Number**

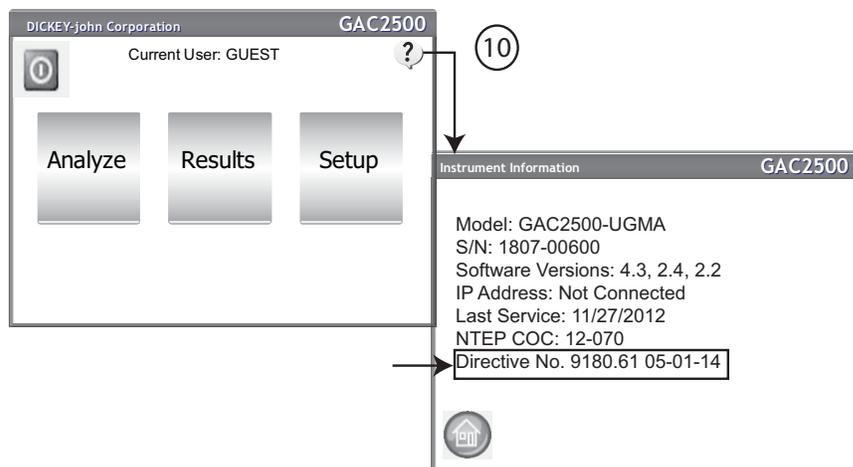



## FORMATTING A USB MEMORY DEVICE


### To verify a memory device is FAT:

1. Insert the USB memory device into the computer.
2. Navigate to “My Computer”, locate the directory for the memory device, and click “Properties”.
3. Look at the ‘File System’ type under the General Tab and verify the device is FAT.

**NOTE:** If the device is not FAT formatted, proceed to next step for reformatting.

**Figure 6**

### Verify Formatting of USB Memory Device

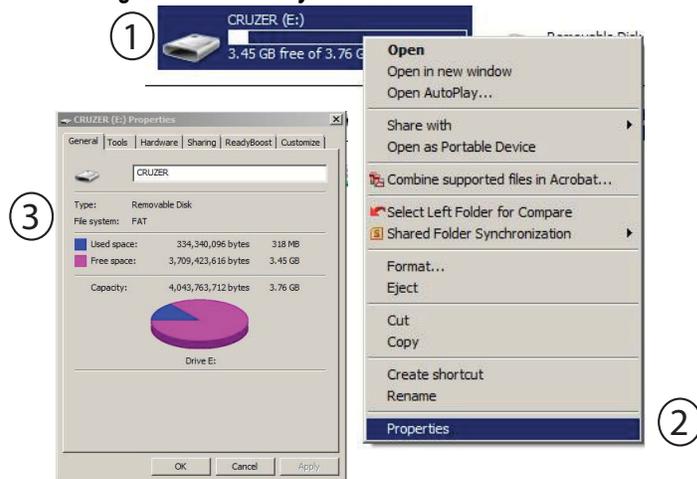

### Reformat memory device to FAT:

4. In “My Computer”, right click on the memory device directory.
5. Click “Format”.
6. Select “FAT” as the file system format.
7. Click “Start”. The USB memory device is now FAT formatted.

**Figure 7**

### Formatting Memory Device to FAT

